## **WARNING:**

This fixture is intended for installation in accordance with the National Electrical Code (NEC) and all local code specifications. If you are not familiar with code requirements, installation by a certified electrician is recommended.


**CAUTION:** To prevent shock, only plug in lamp after lamp assembly is complete.

WARNING: This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to work around this safety feature.

Before assembly, remove all parts and part packages from box. If anything is missing, please contact the retailer from which the product was purchased.



ITEM#: S0019-8042

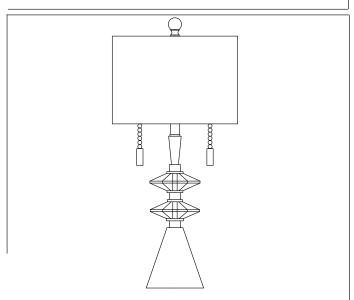

- 1. Pull lamp cord from lamp base. Make sure lamp cord is pulled taut.
- 2. Screw socket assembly (A) onto lamp base (B). **CAUTION:** DO NOT pinch lamp cord between socket assembly (A) and lamp base (B).
- 3. Screw the short threaded end of center stem (C) into socket assembly (A).
- 4. Lower shade (D) down over center stem (C). Pass hole in top of shade bracket over threaded pipe on top of center stem (C).
- 5. Carefully screw finial (E) onto threaded pipe on center stem (C). Tighten finial (E) to secure shade (D) in place. DO NOT over tighten.
- Insert recommended bulb (not included) into socket. WARNING: Verify correct bulb wattage marked on socket of lamp. DO NOT exceed maximum bulb wattage.

