WARNING: DISCONNECT POWER AT THE MAIN FUSE BOX BEFORE INSTALLATION.

WARNING:

This fixture is intended for installation in accordance with the National Electrical Code (NEC) and all local code specifications. If you are not familiar with code requirements, installation by a certified electrician is recommended.

Before assembly, remove all parts and part packages from box. If anything is missing, please contact the retailer from which the product was purchased.

- 1. Carefully pull house wires out of junction box so they are easily accessible during installation.
- 2. Position the mounting bracket (B) so the head of the ground screw is facing out. On the side of the mounting bracket with the head of the ground screw, thread each fixture mounting screw (E) into outer holes in mounting bracket (A) approx. 3/4 of the way into the mounting bracket (A). Holes should be opposite of each other.
- Hold mounting bracket (A) so the head of the ground screw is facing out. Pull house wires through large hole in center of mounting bracket (A). Align holes in mounting bracket (A) with holes in junction box. Thread one junction box screw (B) into each hole in mounting bracket (A) and into holes in junction box. Tighten junction box screws (B) to secure mounting bracket (A) to junction box.

CAUTION: Make sure house wires are pulled completely through hole in mounting bracket. **DO NOT** pinch wires between mounting bracket and ceiling.

- 4. Strip 3/4" of insulation from ends of fixture wires.
- 5. Slightly loosen ground screw on mounting bracket (A). Do not completely remove ground screw. Wrap house ground wire (copper) around ground screw, leaving enough ground wire to attach to fixture ground wire. Twist end of fixture ground wire and end of house ground wire together. Twist wire nut (C) onto ends of wires. Completely tighten wire nut (C). Reference chart below for correct wire connections.

Connect Supply (House) Ground Copper Wire to:


Bare Copper Wire or,

Bare Silver Wire or,

Green Insulated Wire.



ITEM#: SL928378

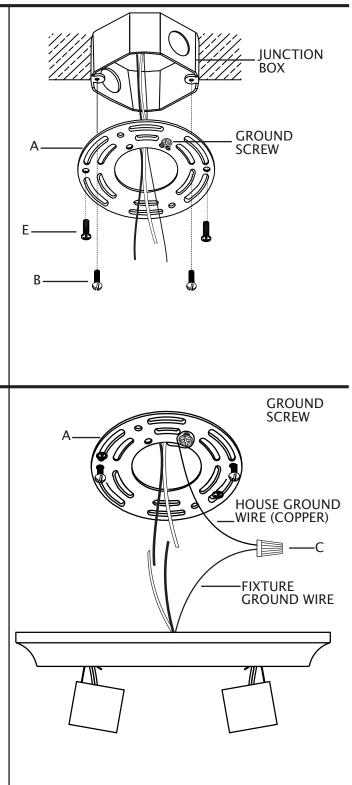

ITEM#: SL928378

6. Twist end of house lead wire (black) and end Connect Black Lead Supply (House) Wire to: Connect White Neutral Supply (House) Wire to: of fixture lead wire together. Twist wire nut (C) Black Wire or, White Wire or, onto ends of wires. Completely tighten wire nut *Parallel Cord *Parallel Cord (Square and Ridged) or, (C). Twist end of house neutral wire (white) and (Round and Smooth) or, end of fixture neutral wire together. Twist wire nut (C) onto ends of wires. Completely tighten No printed words on Printed words on wire insulation or, wire insulation or, wire nut (C). Reference chart to the right for correct wire connections. Insulated Wire Insulated Wire (other than green) (other than green) 7. Wrap electrical tape (not included) around wire with Copper Conductor. with Silver Conductor. nuts (C) and wires. Ensure wires are securely *When parallel wire (SPT 1 & SPT 2) is used: fastened into wire nuts. The lead wire is round in shape or smooth. 8. Carefully push all wires and wire nuts into The neutral wire is square in shape or ridged. junction box. FIXTURE LEAD WIRE HOUSE LEAD WIRE (BLACK) IOUSE GROUND **FIXTURE GROUND** WIRF FIXTURE NEUTRAL S HOUSE NEUTRAL WIRE (WHITE) Α 9. Carefully raise backpan (D) up to ceiling. Align F D heads of each fixture mounting screw (E) on mounting bracket (A) with the larger holes of each keyhole slot in backpan (D). Pass larger holes in each keyhole slot over heads of fixture mounting screws (E). Rotate backpan (D) so fixture mounting screws (E) fit into narrow holes in keyhole slots. Tighten fixture mounting screws (E) to secure backpan (D) to ceiling. 10. Screw recommended bulbs (E26 Edison bulb type, not included) into sockets. Verify correct bulb wattage marked on socket of fixture. WARNING: К DO NOT exceed maximum bulb wattage. 11. Place shade (K) into cage (G). Raise cage (G) with shade (K) up to fixture. Align holes ends of arms on cage (G) with holes along edge of backpan (D). F 12. Thread on thumbscrew (F) into holes in each arm and into holes in backpan (D). Tighten thumbscrews (F) to secure cage (G) with shade (K) BULB ര **O** in place. DO NOT over tighten. Ø Instructions for Mounting Fixture Outdoors or in Wet Location Mounting surface should be clean, dry, flat and 1/4" 1. larger than canopy on all sides. Any gaps between mounting surface and canopy exceeding 3/16" should be corrected as required. Apply silicone caulking compound around top and 2. sides of canopy where back of canopy meets wall G surface to prevent water from seeping into junction box. Leave bottom unsealed so moisture can drain out. MAINTENANCE NOTE: Only use a soft damp cloth to clean fixture as needed. DO NOT use harsh chemicals on fixture. Harsh chemicals may damage fixture. Coastal conditions may cause mineral and residue build-up on fixture. It is recommended that customers in coastal areas clean all external surfaces of fixture once every two weeks with a wet cloth. elkhome.com 2